# Wireless Headset for Chapter Flight Simulator

This 2.4G Wireless gaming headset is used to support remote orientations on the flight simulator. The USB dongle is connected to a USB port on the chapter's projection PC (located on the counter to the right of the flight simulator). The headset is used to communicate with the orientation trainer via a Zoom session on the projection PC.

In the future we may also be providing this for normal use on the Flight Simulator but for now, it's just for remote training and orientations.



**NOTE:** The user must take care when moving the position the microphone on the headset. **Do not** grab the end of the boom mic to move it up or down – **you may damage it**. If the boom microphone is in the folded/up position, then do the following (before putting the headset on your head). While holding the left side earcup with one hand, use the index finger and thumb of the other hand to grab the mounting base of the microphone (where it attaches to the earcup) and carefully rotate the microphone boom from it's upright position (in a counter-clockwise direction) to about 120 degrees. In other words, turn it to the left like a knob. Do not rotate more than 120 degrees as it has a 'hard stop' at that position. It should look like the photo above **after** you have correctly position the microphone for use. In a similar manner, when finished using the headset, carefully rotate the microphone boom (clockwise) back to the vertical/closed position for storage.



The headset controls are located on the rear side of the left side earcup as shown in the picture above.

Before putting the headset on your head, turn on the power by holding down the power ON/OFF button for at least two seconds (listen carefully for the aural message "power on" coming from the headset speakers).

There is an indicator LED just below the power button to indicate that it has connected with the USB dongle in the PC. Flashing red and blue indicates attempting to connect. When connection is established the flashing LED lights will go off and the aural message "connected" will be heard. The blue LED will blink about once every 10 seconds to indicate power is on and the headset is connected.

The volume adjustment is an 'up/down' style thumb wheel located above the power button. Position it to full volume to start with and adjust lower (downward) later if necessary.


The top button is the microphone ON/OFF (mute) button. You will hear the aural message "microphone on" or "microphone off" when pressing the button.


The USB Type-C port at the bottom is for recharging the internal battery using the supplied USB adapter cord. Do so only when advised by a trainer.

When you are finished using the headset, press and hold the power ON/OFF button for at least two seconds until you hear the aural message "power off".

The following pages are from the manual that came with the headset.



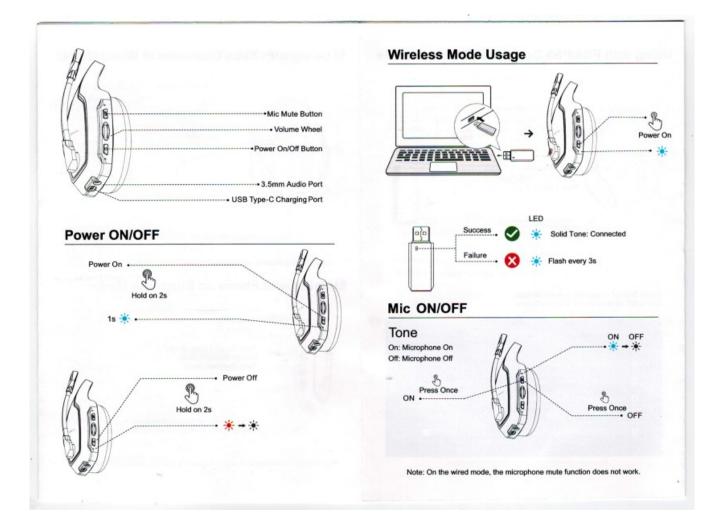

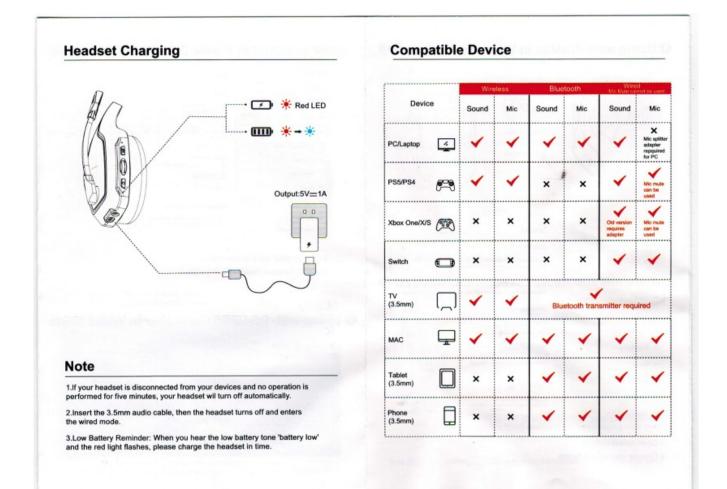

	Mac in Wireless Mode	Semage	- 0 x
		@ Nome	Sound
15 M		Find a setting	Jound
	( Sec	System	Input
Ha Ha			Choose your input device
	Transmitter	Cooperty	Certain appromay be set up to use different sound devices than the
		de Sound	one before the form of the set of to use different sound devices than the nound options. Customice app volumes and devices in advanced sound options.
	Connection	Notifications & actions	Device properties
		D Focus assist	Test your microphone
		C Power & sleep	A Toutlehost
		🛥 Storage	Manage sound devices
Settings		CB Tablet made	
@ Home	- 0 x	El Mutitating	Advanced sound options
	Sound	67 Projecting to this PC	App volume and device preferences Castomor app volumes and the speakers or devices they use
Find a setting	Output		
System	Choose your output device	3 Change wave land to the	
	HW01 V	3.Choose your input devie	ce 'HW01'
Display	Certain apps may be set up to use different sound devices than the	4. HW01 wireless headse	at can be used.
de Sound	one selected here. Customize app volumes and devices than the sound options.		
Notifications & actions	Device properties		
D Focus assist	Master volume	Q Using with PSA/P	SE Controllor in Mar
	40 34	e cong warr 54/F	S5 Controller in Wired Mod
O Power & sleep	A Troubleshoot		
⇒ Storage	Manage sound devices		PS4/PS5 Console
Tablet mode		K III	0 0 00
8 Multitatking	Input	HA MA	00000
	Choose your input device		0.0"
P Projecting to this PC	HW01 V		
Open sound settings			
			Aun

#### **O** Using with Xbox Controller in Wired Mode Using with PS4/PS5 Console in Wireless Mode New Xbox One Old Xbox One 8.00 0 0 ¢ ◎ 0 0 **₽** A USB dongle . 51 lug in the USB port PS5 Note: Wireless mode is not available for Xbox. **O** Using with Phone on Bluetooth Mode Route: Settings → Devices → Audio Devices Set 'HW01' as Input Device & Output Device B Audio Devices Press button 3 times quickly to enter Bluetooth mode Input Device Output Device Tone: Bluetooth Mode 0 Adjust Microphone Level • \* 40 488 F Volume Control (Headphones) If you want to go back to wireless mode, you can press the power button 3 times and hear a tone saying 'USB Mode'. Output to Headphones Switch Output Device Automatically Note: Frequent switching of modes will cause the headset connection to slow down.

### **Technical Parameters**

Speaker Driver:	
Sensitivity:	
Microphone Sensitivity:	38±2dB
Impedance:	
Frequency Range:	
Microphone Size:	6.0x2.7mm
Microphone Directionality:	Omnidirectional
Connection Mode:	
Playtime:Wireless-50Hours/B	luetooth-50Hours/Wired-+-
Charging time:	4 Hours

### 2.4GHz Wireless

The 2.4GHz connection is available on Windows / Mac / PS4 / PS5.

### Bluetooth Wireless

The Bluetooth connection is available on Mobile phone /Mac/iPad.

### Charging and Working Time

1.Please charge the headset with 5V/1A standard adapter or via the USB port of PC;

 Generally, it takes 4 hours to fully charge the headset, but actual the charging time may vary according to different charging devices;

3.Up to 48hours working time (at 70% volume) after fully charged.

## The Microphone can not Work

#### Wireless mode:

1.Check whether you've set the headset as the default recording device; 2.Check if the microphone as been turned off.

#### Wired mode:

1.Make sure the line-in cable has been connected tightly; 2.Please use a converter cable while connecting with PC.



1. Check if there are other obstacles which affect the transmitter;

2.If intermittent sound occurs when you are communicating, check whether the network of your device works smoothly;

3.Check whether you've set the headset as the default recording debvice; 4.Check whether the headset is in lowest volume setting.



1.Check whether you used a USB Extension Cable or USB Hub It is not recommended.

2.Plug directly into the USB jack of the devices host.

3.Try to replace a USB jack. (Some USB jacks may be power shortage). 4.For PC, it is recommended to plug into the USB jack at the back of the host.

#### · Customer Support

support@beaviiootop.com