

Default Keyboard Shortcuts:

Sim Control

Alt+F4 Quit
Shift+Spacebar Take screenshot
Shift+Ctrl+f Show frames per second
m Toggle map
i Toggle instructor station
` Toggle flight configuration window
k Set time of day earlier (Shift+k for rapid change)
l Set time of day later (Shift+l for rapid change)
Ctrl+t Cycle simulation rate (1x, 2x, 4x, 8x)
p Pause
Alt+r Toggle replay mode
Ctrl+; Reset flight to last starting condition

Viewpoint adjustment

(Combine with Shift for fast changes, with Ctrl for slow changes)

Up Move viewpoint up
Down Move viewpoint down
Left Move viewpoint left
Right Move viewpoint right
, Move viewpoint back
. Move viewpoint forward
f Rotate view down
r Rotate view up
- Zoom out
= Zoom in

More View Commands

y Toggle yoke visibility
c Free camera
w Default view
Shift+2 Fly-by view
Shift+4 Circle view
Shift+8 Chase view
Ctrl+P Toggle 3D path
Numpad-# Goto quick look #
Ctrl+Numpad-# Set quick look #

Aircraft Controls and Systems

Shift+Ctrl+E Autostart engine(s)

F1 Throttle down
F2 Throttle up
F3 Prop down
F4 Prop up
F5 Mixture down
F6 Mixture up
F8 Mixture max
F7 Mixture cutoff
F11 Toggle carb heat
1 Flaps up one position
2 Flaps down one position
G Toggle landing gear
B Toggle brakes regular
V Toggle brakes max
] Pitch trim up
[Pitch trim down
5 Rudder trim left
6 Rudder trim center
7 Rudder trim right
8 Aileron trim left
9 Aileron trim center
0 Aileron trim right
/ Toggle beta thrust
Shift+/ Toggle thrust reverse
Ctrl+9 Nav1 swap frequency
Ctrl+0 Nav2 swap frequency
Return Contact ATC (will transmit if connected to PilotEdge)
Suggested Additional Shortcuts (keyboard or joystick)
Transmit audio: Com1 PageUp
Transmit audio: Com2 PageDown
Autopilot Heading Sync (sync heading bug) Home
If not using USB radio controller:
Com1 swap frequency Ctrl+7 or Ctrl -
Com2 swap frequency Ctrl+8 or Ctrl =
Toggle view GPS1 (or Reality XP GPS) End
Com1 Coarse Up Alt+Ctrl+Up
Com1 Coarse Down Alt+Ctrl+Down
Com1 Fine Up (25kHz) Alt+Ctrl+Right / Fine Down is Alt+Ctrl+Left